



Install Plant Plugs at Horizontal & Vertical Joints Between Bags at a Density of 2-3 Plants per Bag or As Recommended By Landscape Architect or Project Designer. DO NOT Rupture Bags.

Apply Hydroseed or Slurry To Exposed Faces of Bags Prior to, or as an Alternative to Installing Live Plants For More Uniform and Immediate Coverage. Plants Species, Tackifier, Erosion Matting & Seeding Rate to be Determined by Landscape Architect or Project Designer.

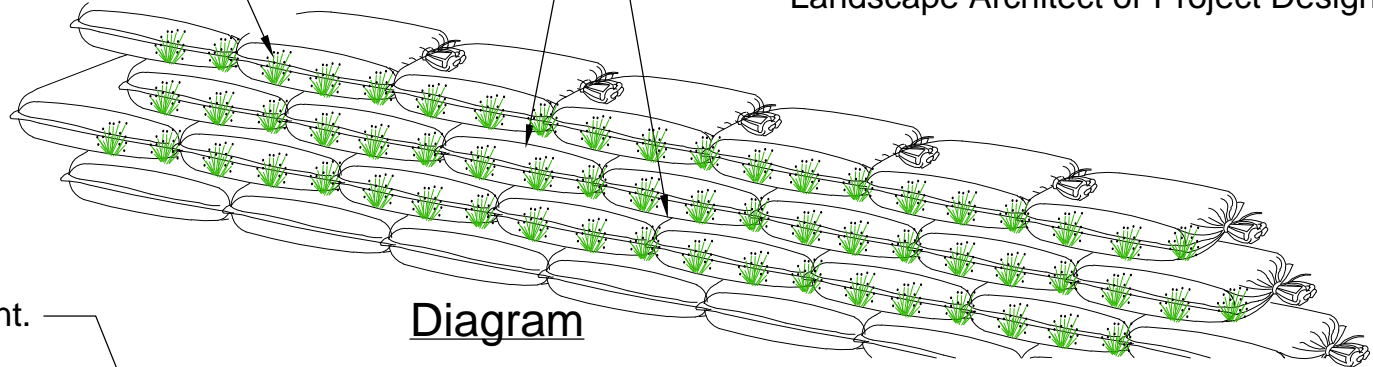

**Diagram**

Cover Coping w/ Soil & Plant. DO NOT Rupture Bags

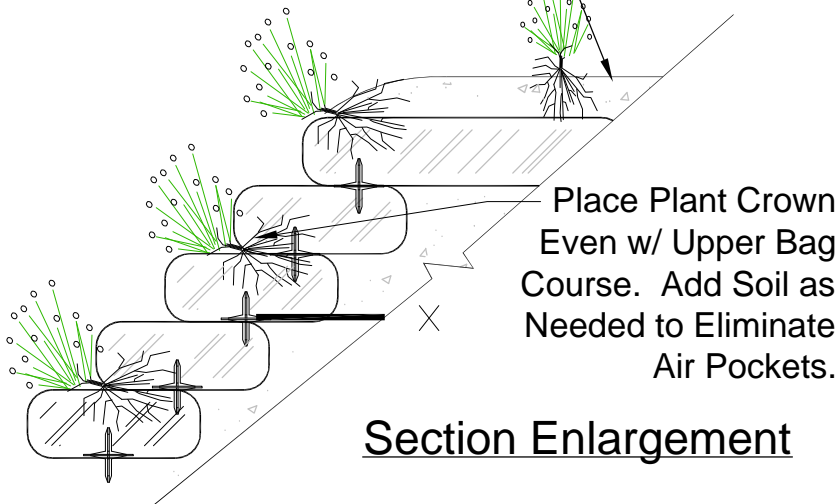

**Section Enlargement**

Place Plant Crown Even w/ Upper Bag Course. Add Soil as Needed to Eliminate Air Pockets.

**Notes:**

- Moisten Bags prior to planting to ensure better establishment. Do Not Over-Water.
- For sites requiring or utilizing irrigation, a misting system or soaker hose is recommended.
- Plant Plugs shall be 2.5" Pots or Smaller.
- Live plants can be installed during or after wall completion.
- See Sheet GN1-21 and Project Specifications for Additional Details & Installation Instructions
- Do Not Maintain Vegetation by Mowing or Burning.
- Consult w/ Local Expert for Plant Species and Spacing.

This is a typical, non-site specific design. Envirolok LLC makes these documents available on an "as is" basis. All CAD (.dwg) and PDF (.pdf) files were created as a service to our customers. Final determination of the suitability of any information or material for the use contemplated, and its manner of use, is the sole responsibility of the user. A final project specific design should be prepared by a qualified, licensed, professional engineer. THIS DRAWING IS NOT FOR CONSTRUCTION. Copyright 2020, Envirolok LLC

TITLE  
**LIVE PLANTING / HYDROSEEDING DETAIL**

DATE  
MARCH 2021

SCALE  
NTS

SHEET  
SHEET VD1-21



10101 N. Casey Road  
Evansville, WI 53536  
(P) 608.226.2565

www.envirolok.com  
ecosolutions@envirolok.com  
(F) 608.884.4640

REVISIONS