


Cover Coping with Sod or Soil and Live Plants.

See Planting Details and Specifications for Instructions..

**Notes:**

- Moisten Bags prior to planting to ensure better establishment. Do Not Over-Water.
- Sedum Mats, Sod / Vegetative Mat Shall be Watered or Irrigated until Roots are Fully Established. See Specifications for Full Planting & Watering Instructions.
- See Sheet GN1-21 and Project Specifications for Additional Details & Installation Instructions
- Do Not Maintain Vegetation by Mowing or Burning.
- Consult w/ Local Expert for Plant Species and Spacing.

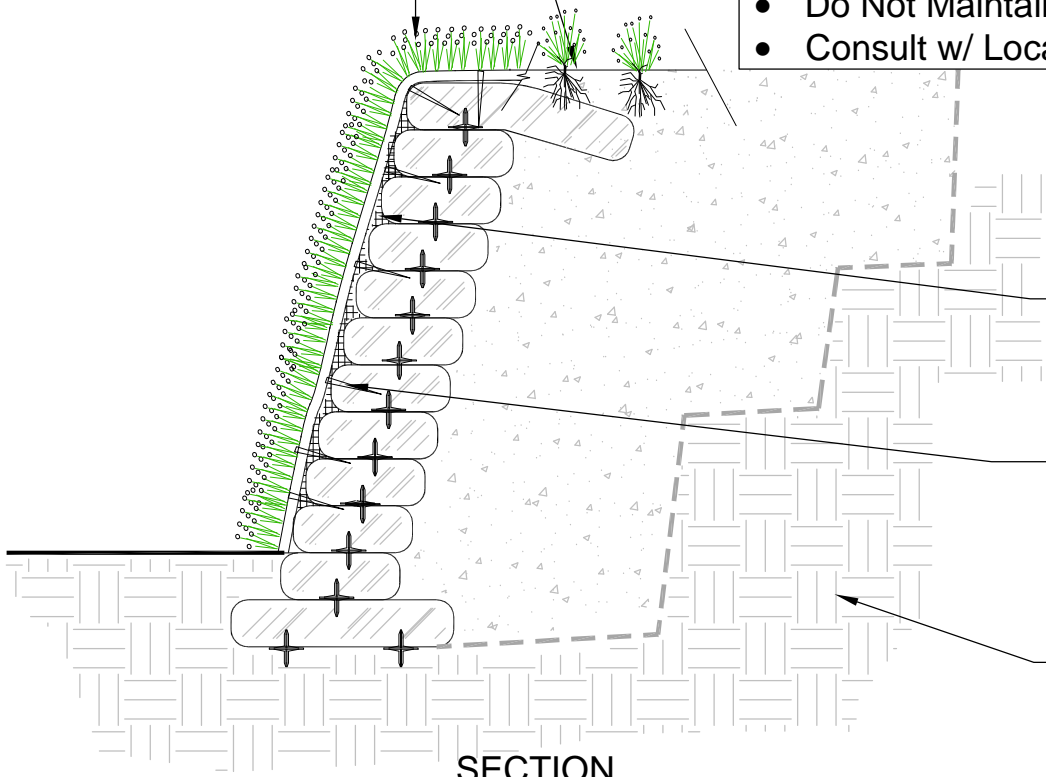

Install Soil Over Top of Envirolok Bags to Eliminate Void Space/ Air Pockets.

Place Sod Stakes Through Envirolok Bag at All Edges of Vegetative Mat and as Needed to Ensure Proper Connection without Air Gaps.

Foundation Soil

**SECTION**

This is a typical, non-site specific design. Envirolok LLC makes these documents available on an "as is" basis. All CAD (.dwg) and PDF (.pdf) files were created as a service to our customers. Final determination of the suitability of any information or material for the use contemplated, and its manner of use, is the sole responsibility of the user. A final project specific design should be prepared by a qualified, licensed, professional engineer. THIS DRAWING IS NOT FOR CONSTRUCTION. Copyright 2020, Envirolok LLC

TITLE  
**SOD / VEGETATIVE MAT INSTALLATION**

DATE  
MARCH 2021

SCALE  
1/2" = 1' - 0"

SHEET  
SHEET VD4-21



10101 N. Casey Road  
Evansville, WI 53536  
(P) 608.226.2565

www.envirolok.com  
ecosolutions@envirolok.com  
(F) 608.884.4640

REVISIONS
